
CHÉRIPETS



THE LEDGE


Not just pieces to assemble, but a place to become. Follow along as form finds meaning and a simple structure turns into their sanctuary.

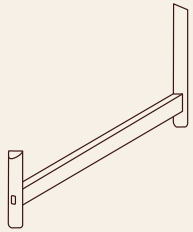


PART A x 2
Set of Legs




PART B x 2
Set of Tie Members

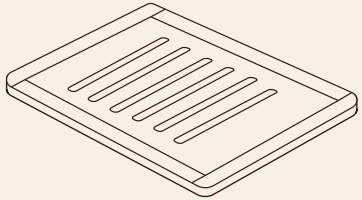

PART C x 1
The Ledge

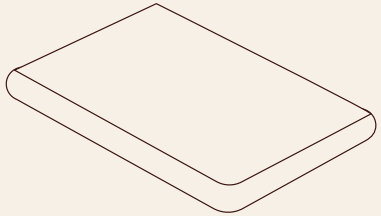

PART D x 1
Matress

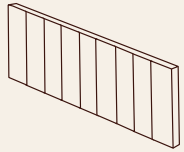

PART E x 1
Back



PART F x 4
Hex bolt small



PART G x 12
Hex bolt tall

The Making


This manual is designed to guide you through the thoughtful assembly of your piece.

Each step has been carefully considered to ensure a seamless experience, allowing every component to come together with clarity and precision.

Scan for support

STEP 1

Take both legs and align them as shown above.

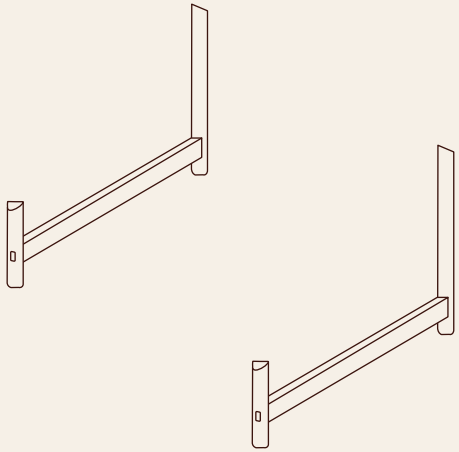


STEP 2

Take the Tie Members and align them with the holes.


Use the tall hex bolts to fix them from both sides.



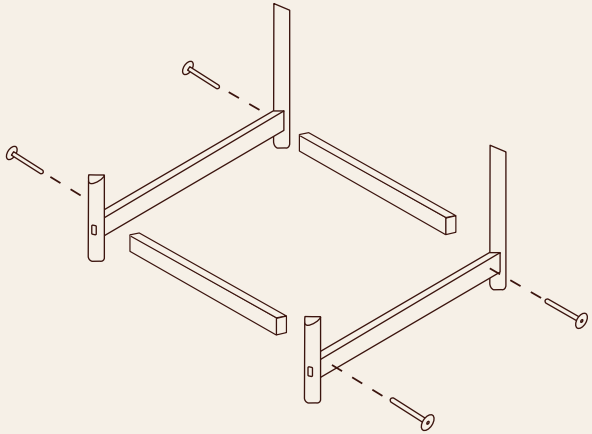

STEP 3


Tighten the bolts to create a stable structure.

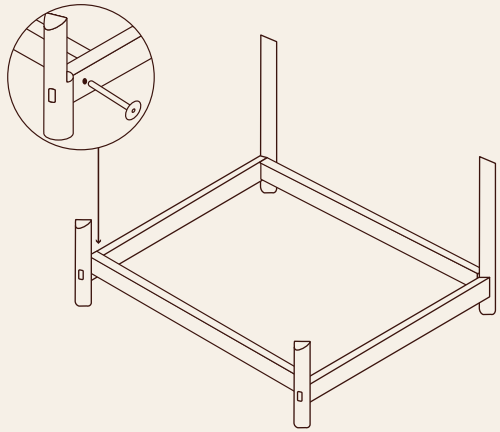


STEP 4

Place the platform as shown and fix it with the nutbolts as shown above.

Use one tall and small bolt as shown to attach the Ledge to the base frame.




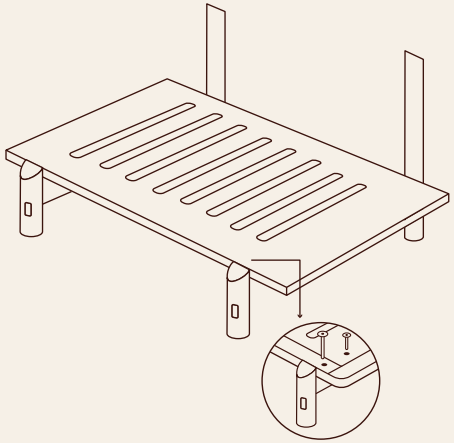

STEP 5


Place the wooden back and align against the holes. Fix them with the tall hex bolts as shown.



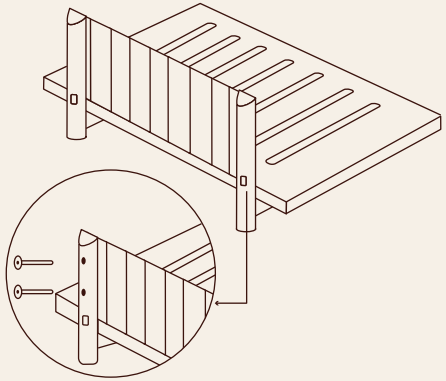


STEP 6

You have your structure ready!

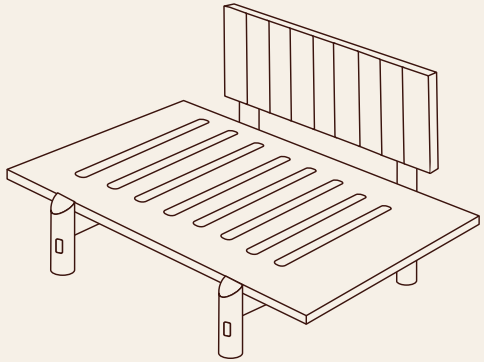

Put the mattress on the platform and start using The Ledge!

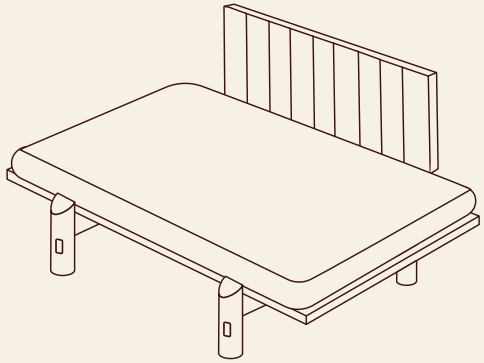

CARING FOR THE LEDGE

GENERAL MAINTENANCE



Use a soft, dry cloth to regularly dust The Ledge. Microfiber cloths work well. For routine cleaning, use a damp cloth followed by a dry cloth to prevent moisture from sitting on the surface. Avoid soaking the wood.

CLEANING SPILLS



Wipe up any spills immediately to prevent staining or damage to the finish. Use a mild soap solution (e.g. diluted dish soap) for tougher spots, followed by wiping with a damp cloth and drying thoroughly.

POLISHING



Given the low gloss finish, frequent polishing isn't necessary. If you do polish, use a product recommended for low-gloss finishes and test it on a small, inconspicuous area first. Avoid using wax, as it can build up and create a dull, cloudy appearance.

ENVIRONMENTAL FACTORS



Keep The Ledge indoors, avoiding extremely humid environments. Avoid placing The Ledge near heat sources like radiators or fireplaces. Keep The Ledge out of direct sunlight to prevent fading or discoloration.

CUSHION CLEANING

TIP 1 Regularly remove and machine wash the outer cover.

TIP 2 Do not wash the interior cushion, simply air it out to keep fresh and spot clean with a damp cloth and mild detergent.

TIP 3 Avoid direct sunlight to preserve the color and material of the cushion.

TIP 4 Immediately wipe spills with a damp cloth, using a mild detergent for stubborn stains.

WASH INSTRUCTIONS



Machine wash cold 85°F/30°C



Tumble dry on low heat



Do not iron



Dry Cleanable

CHÉRIPETS

Comfort, crafted with Love

cheri_pets info.cheripets@gmail.com cheri_pets