


CHÉRIPETS

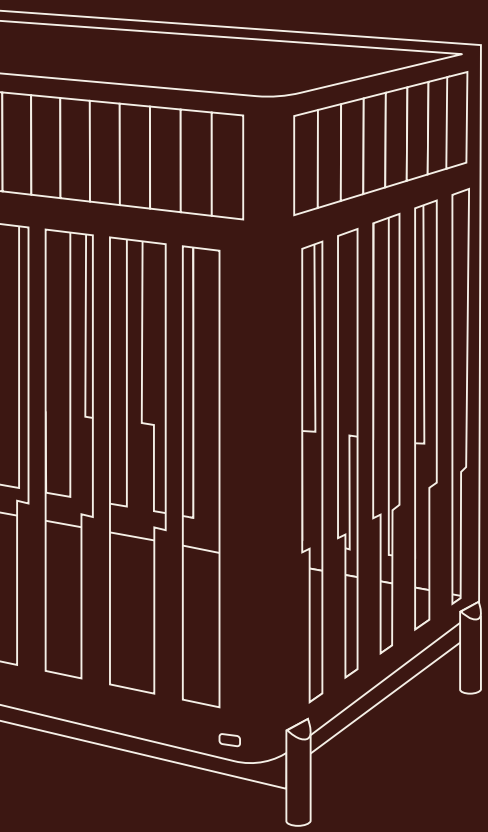

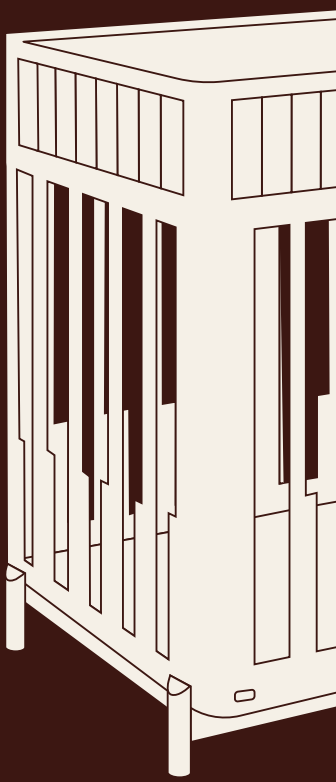


THE NOOK


Not just pieces to assemble, but a place to become. Follow along as form finds meaning and a simple structure turns into their sanctuary.

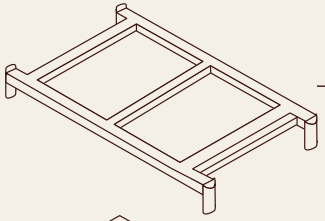


PART A x 1
Base frame structure

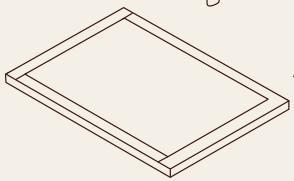


PART B x 1
Base Panel

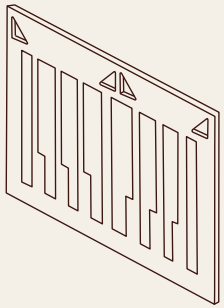


PART C x 1
Back Panel

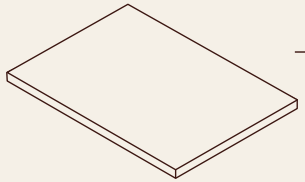


PART D x 1
Middle panel

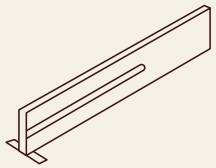


PART E x 1
Drawer slide panel
(with prefixed drawer channels and L brackets)

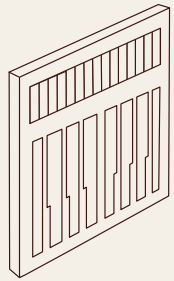


PART F x 2
Side panels

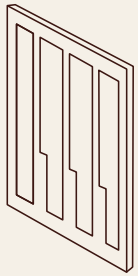

PART G x 2
(with prefixed hinges)

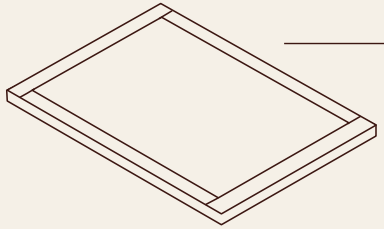

PART H x 1
Top Panel

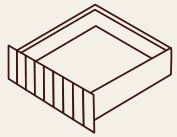

PART I x 2
(with prefixed drawer channels)



PART K x 16
Hex bolt small



PART J x 8
Hex bolt tall

The Making

This manual is designed to guide you through the thoughtful assembly of your piece.

Each step has been carefully considered to ensure a seamless experience, allowing every component to come together with clarity and precision.

Scan for support


STEP 1

Place the base structure on the floor.

Use the base panel to fix it with the structure.

Use the hex bolts to secure the frame to the base.



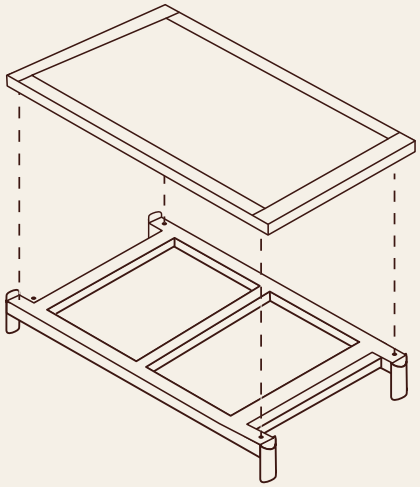


STEP 2

Use the back panel and fix it with the hex bolts from the underside of the structure.

Secure them tightly to keep the structure stable.



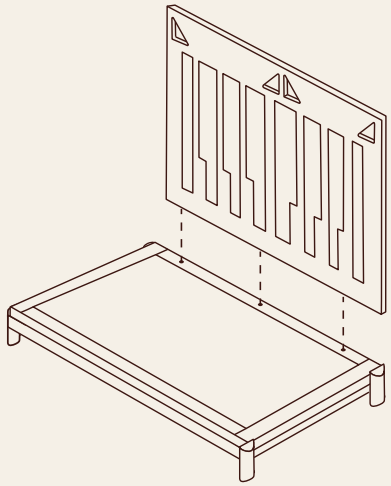



STEP 3

Take the side panel and fix it on the underside as the back panel.

Now fix the same from top through the corner brackets.

Do the same with the other panel.

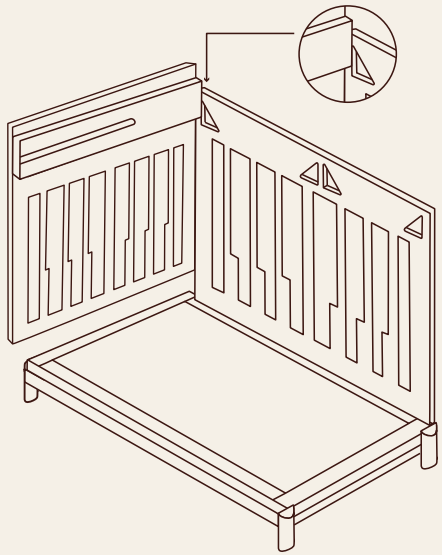


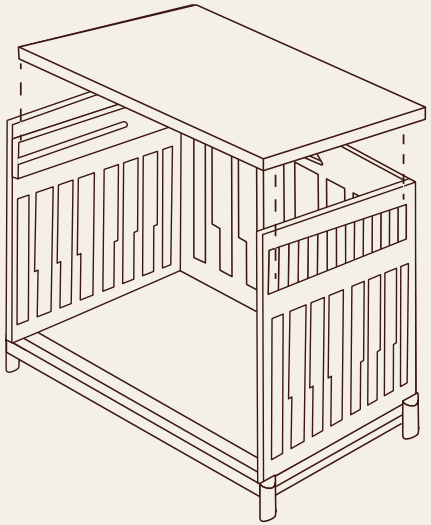

STEP 4

Take the middle panel and fix it with the L brackets and corner brackets.


Secure it tight keeping the structure together.

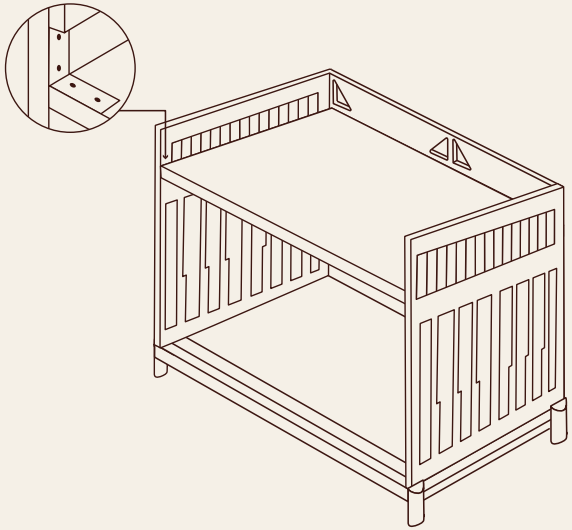

STEP 5

Do the same with the corner brackets.




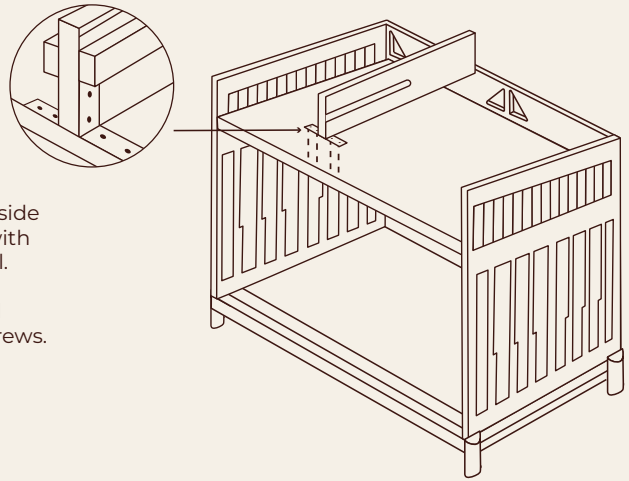

STEP 6


Take the drawer side panel and fix it with the middle panel.

Secure the panel using the hex screws.

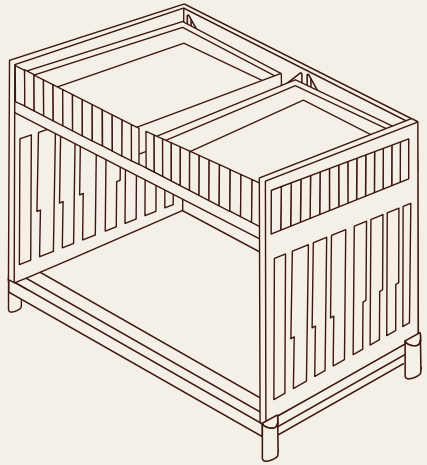

STEP 7


Use both the drawers and fix it in place.

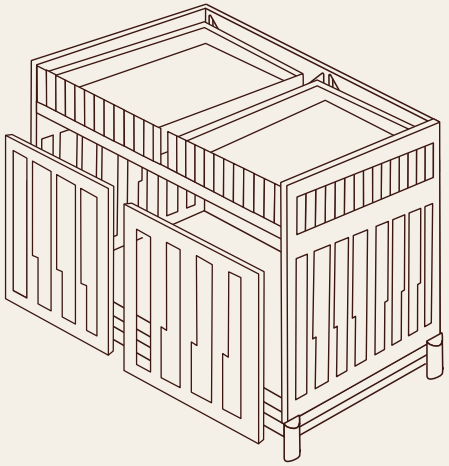

STEP 8

Use the shutters and fix them in front as shown.




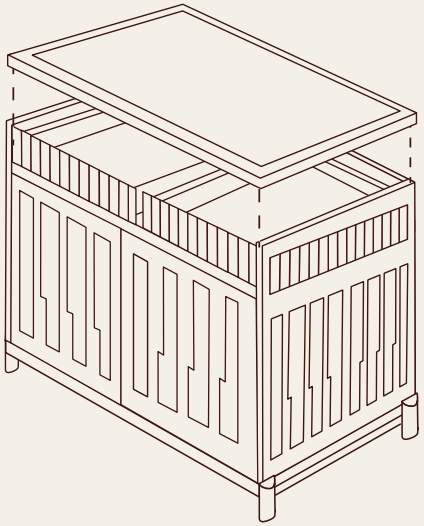

STEP 9

Use the top panel to complete the structure.



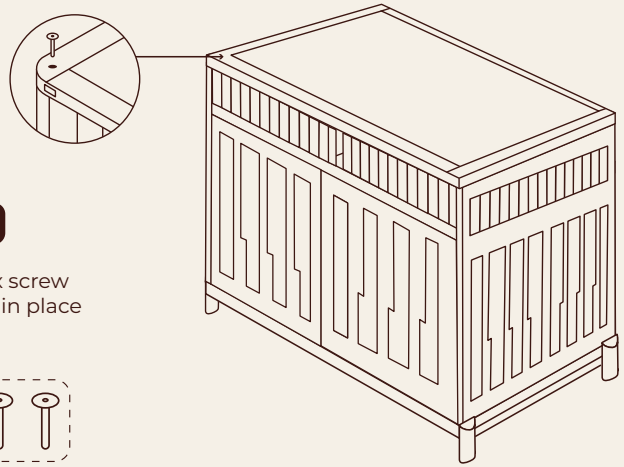


STEP 10

Use the hex screw to secure it in place as shown.



Your piece is now complete, ready to be lived with and loved!

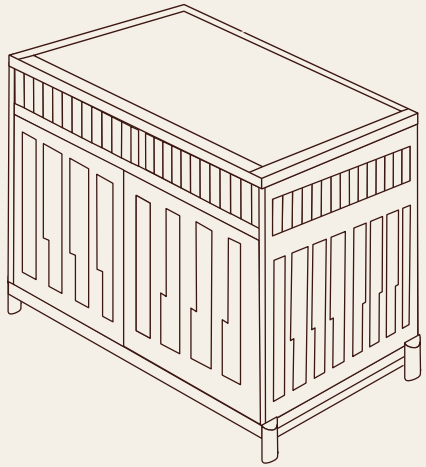

CARING FOR THE HUSH

GENERAL MAINTENANCE



Use a soft, dry cloth to regularly dust The Hush. Microfiber cloths work well. For routine cleaning, use a damp cloth followed by a dry cloth to prevent moisture from sitting on the surface. Avoid soaking the wood.

CLEANING SPILLS



Wipe up any spills immediately to prevent staining or damage to the finish. Use a mild soap solution (e.g. diluted dish soap) for tougher spots, followed by wiping with a damp cloth and drying thoroughly.

POLISHING



Given the low gloss finish, frequent polishing isn't necessary. If you do polish, use a product recommended for low-gloss finishes and test it on a small, inconspicuous area first. Avoid using wax, as it can build up and create a dull, cloudy appearance.

ENVIRONMENTAL FACTORS



Keep The Hush indoors, avoiding extremely humid environments. Avoid placing The Hush near heat sources like radiators or fireplaces. Keep The Hush out of direct sunlight to prevent fading or discoloration.

CHÉRIPETS

Comfort, crafted with Love

cheri_pets info.cheripets@gmail.com cheri_pets